

# JETYD

## TOOL MODEL: ICE-1

### PRESSURE/TORQUE CONVERSION CHART

#### Standard Torque Chart

PRESSURE IN PSI	TORQUE IN			PRESSURE IN BAR
	FT. LBS.	KGM	NM	
1500	196	27	266	104
1600	209	29	283	110
1800	235	33	319	124
2000	261	36	354	138
2200	288	40	390	152
2400	315	44	426	165
2600	341	47	463	179
2800	368	51	499	193
3000	395	55	535	207
3200	421	58	571	220
3400	447	62	606	234
3600	473	65	641	248
3800	499	69	676	262
4000	525	73	712	276
4200	551	76	747	290
4400	577	80	782	303
4600	603	83	817	317
4800	629	87	853	331
5000	655	91	888	345
5200	680	94	922	358
5400	705	98	956	372
5600	730	101	990	386
5800	755	104	1023	400
6000	780	108	1057	414
6200	805	111	1092	427
6400	831	115	1126	441
6600	856	118	1161	455
6800	882	122	1195	468
7000	907	125	1230	482
7200	932	129	1263	496
7400	957	132	1297	510
7600	981	136	1330	524
7800	1006	139	1364	538
8000	1031	143	1398	552
8200	1056	146	1432	565
8400	1081	150	1466	579
8600	1107	153	1500	593
8800	1132	157	1534	607
9000	1157	160	1568	620
9200	1182	164	1603	634
9400	1208	167	1637	648
9600	1233	171	1672	662
9800	1259	174	1706	676
10000	1284	178	1741	690