

# HYTORC

## TOOL MODEL: HY-STEALTH 2 with HEX LINK

### PRESSURE/TORQUE CONVERSION CHART

#### Standard Torque Chart

TORQUE CHART FOR TOOLS WITH VALVE REMOVED. FOR SERIAL NUMBER F3110 AND HIGHER

PRESSURE IN PSI	TORQUE IN			PRESSURE IN BAR
	FT. LBS.	KGM	NM	
1500	278	38	377	104
1600	297	41	403	110
1800	336	46	456	124
2000	375	52	508	138
2200	413	57	559	152
2400	450	62	610	165
2600	488	67	661	179
2800	525	73	712	193
3000	563	78	763	207
3200	600	83	814	220
3400	638	88	865	234
3600	675	93	915	248
3800	713	99	966	262
4000	750	104	1017	276
4200	787	109	1067	290
4400	825	114	1118	303
4600	862	119	1169	317
4800	900	124	1219	331
5000	937	130	1270	345
5200	974	135	1320	358
5400	1011	140	1371	372
5600	1048	145	1421	386
5800	1085	150	1471	400
6000	1122	155	1521	414
6200	1160	160	1572	427
6400	1198	166	1623	441
6600	1235	171	1675	455
6800	1273	176	1726	468
7000	1311	181	1777	482
7200	1348	186	1827	496
7400	1385	191	1877	510
7600	1421	197	1927	524
7800	1458	202	1977	538
8000	1495	207	2027	552
8200	1532	212	2077	565
8400	1570	217	2128	579
8600	1607	222	2179	593
8800	1645	227	2229	607
9000	1682	233	2280	620
9200	1719	238	2331	634
9400	1757	243	2382	648
9600	1794	248	2432	662
9800	1832	253	2483	676
10000	1869	258	2534	690

# IMPORTANT SAFETY INSTRUCTIONS

**WARNING:** Your **HYTORC TORQUE MACHINE** is a power tool, and as with any power tool, certain safety precautions should be observed to avoid accidents or personal injury. The following tips will assist you.

- **READ ALL INSTRUCTIONS.**
- **KEEP WORK AREA CLEAN AND WELL LIT.**
- **CONSIDER WORK AREA ENVIRONMENT.** Electrical Pumps should never be used in an atmosphere which can be considered potentially volatile. If there is any doubt, use an air pump. Also Note: metal to metal contact can cause sparks, precautions should be taken.
- **AVOID PREMATURE TOOL STARTING.** The Pump Remote Control is for the **TOOL OPERATOR** only.
- **STAY CLEAR DURING OPERATION.** In most cases, the tool will allow “hands free” operation. If the tool must be held or steadied during operation, use alternative means of securing the tool to the application
- **GUARD AGAINST ELECTRIC SHOCK.** Ensure the pump is properly grounded and the proper voltage is being used.
- **STORE IDLE TOOLS.** When not in use, tool and accessories should be properly stored to avoid deterioration
- **USE RIGHT TOOL.** Don't force small tools or attachments to do the job of a larger tool. Don't use a tool for purposes not intended.
- **PROPER SAFETY ATTIRE.** When handling/operating hydraulic equipment use work gloves, hard hats, safety shoes and other applicable clothing.
- **USE SAFETY GLASSES.**
- **MOVING EQUIPMENT.** Do not use hydraulic hoses, uni-swivels, pump power or remote cords as means of moving the equipment.
- **MAINTAIN TOOLS WITH CARE.** For top performance, inspect tools, powerpack and accessories for visual damage frequently and always prior to use. Always follow instruction for proper tool and pump maintenance. Refer to the Operations Maintenance Section for further clarification
- **STAY ALERT.** Watch what you are doing. Use Common sense. Do not use power equipment under the influence of any mood altering substances.
- **PRIOR TO OPERATION**  
Ensure that all hydraulic connections are securely connected and there is no leakage  
Verify that the Hydraulic hoses are not kinked or otherwise damaged.  
Ensure the square drive and its retainer are fully and securely engaged.  
Be certain that all connectors, elbows, fitting and swivels are not bent, loose or damaged.
- **PRIOR TO USE.**  
Check sockets for size, quality and flaws. (Do not use if questionable)  
Cycle tool to ensure proper function.  
Locate a solid, secure reaction point.  
Be sure the reaction arm retaining clamp is fully engaged.  
Be sure the hydraulic hoses are free of the reaction point.  
Pressurize the system momentarily; if the tool tends to “ride up” or to “creep”, stop and re-adjust the reaction arm to a more solid and secure position.

**NOTE:** Remain clear of the reaction arm during operation and never put body parts between reaction arm and reaction surfaces.

- **ALWAYS USE QUALITY ACCESSORIES.** Always use top quality impact sockets in good condition which are the correct size and fully engage the nut. Hidden flaws, however, remain a possibility which could cause breakage, so stay clear of sockets during operation
- **DO NOT USE** other equipment to enhance performance (Hammer on Socket/Tool)

**NOTE:** Hytorc Pumps are designed to operate Hytorc Tools only. Damage may occur to the pump or the product that is being operated due to misuse.

## SAVE THESE INSTRUCTIONS FOR FUTURE USE!